


## X-FineRework-S Precision Rework System for boards up to 12" wide


(Patent Pending)

### Features:

- ◆ **X-ServiCE D** - Unique Digital SMT Rework/Repair Unit designed to allow even a novice to Rework or Repair complicated SMT, multilayer PCB's quickly, without a danger of a damage to a board or components.
- ◆ **Focus "+"** - Digital SMT Convection Rework System has been designed to perform safe and efficient rework of SMD and BGA components. It has 4 time/temperature zones for each profile PREHEAT, SOAK, REFLOW and COOL DOWN.
- ◆ **XK-4** - Tool Stands with fine X-Y positioning ( $\pm 10$  mm), rotation ( $\Theta = \pm 10^\circ$ ) and up/down Z-axis movement (dual knob, for left and right handed operators). holds an XHT Series Hot Air Tool in a vertical position for precise component removal and installation operations.
- ◆ **XU-1S** - Universal, Retractable Board Holder for boards up to 12" wide has open frame construction for use with under board pre-heaters. Includes four adjustable, universal arms to hold and support irregular shape boards.

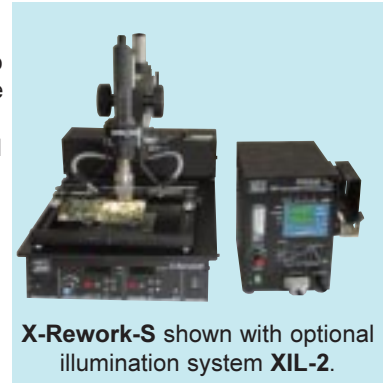

X-Rework-S shown with optional illumination system XIL-2.

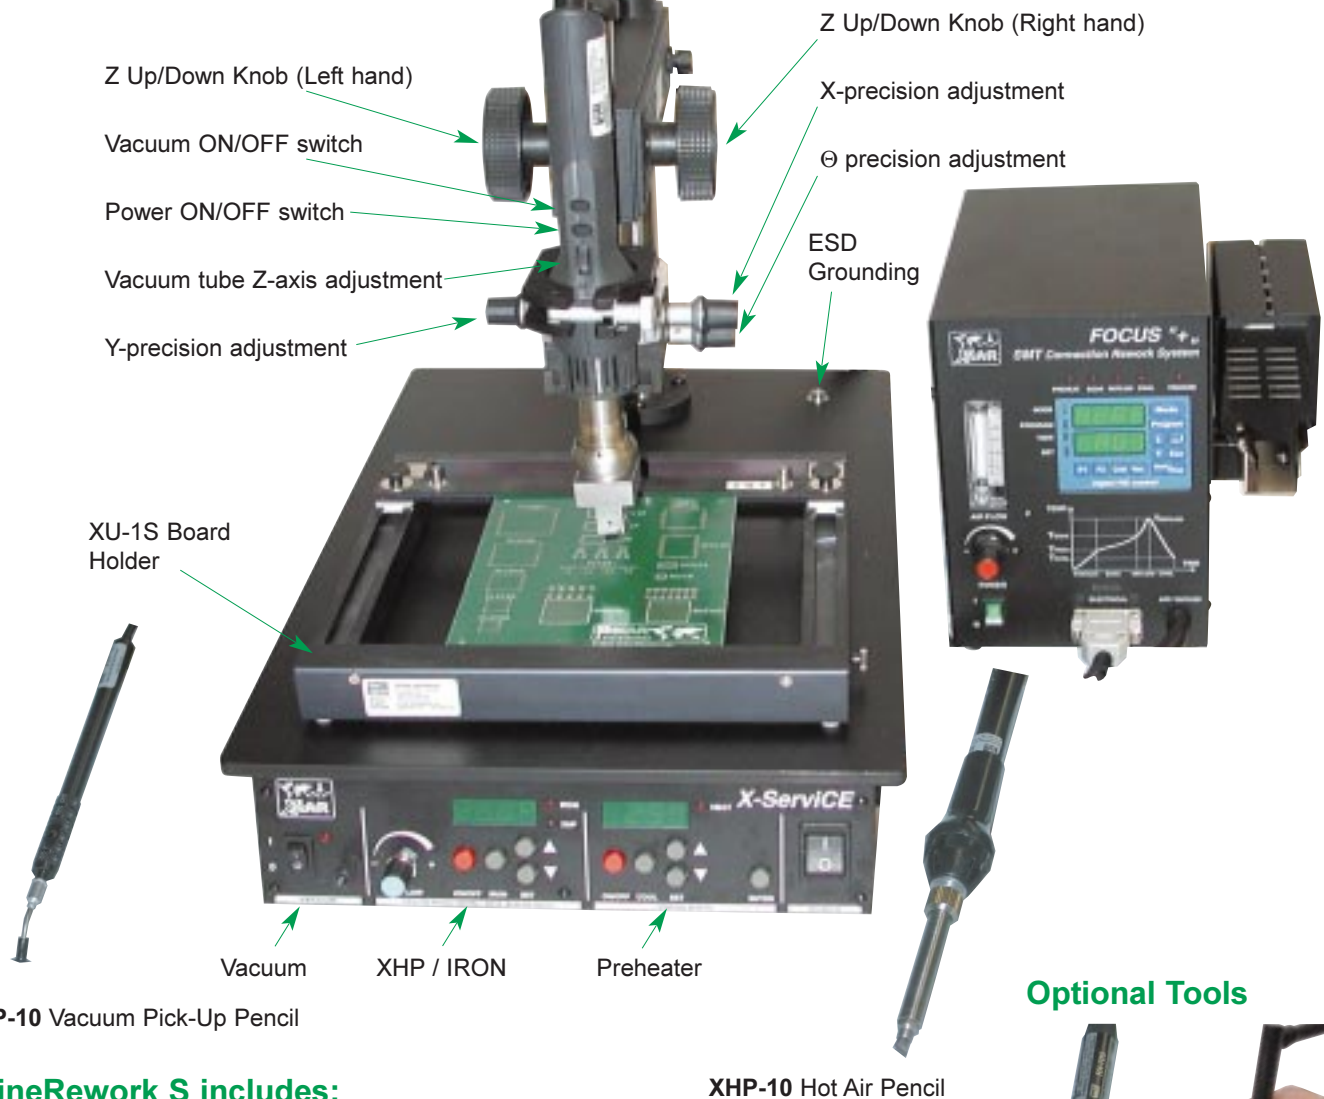

### Optional Tools

### X-FineRework S includes:

- **X-ServiCE D** - Digital PID Control SMT Rework/Repair Unit with integrated Preheater.
- **Focus "+"** - Programmable Hot Gas Rework System.
- **XK-4** - Tool Stand with fine X-Y positioning, rotation and up/down Z-axis movement (dual knob, for left and right handed operators).
- **XU-1S** - Universal, Retractable Board Holder for boards up to 12" wide.
- **XNH-1** Nozzle holder with storage compartment
- **Nozzle #107** Nozzle XNB-27x27 for BGA225 Component

### Order Numbers:

<b>X-FineRework-S-115</b>	Rework system for boards up to 12" wide for 110-120V AC
<b>X-FineRework-S-220</b>	Rework system for boards up to 12" wide for 220-240V AC